







# Description

Exposed, Battery Powered, Sensor Activated, Royal® Optima® SMOOTH $^{TM}$  Urinal Flushometer for 34" top spud urinals.

## Flush Cycle

 $\square$  Model 186-1.0 Low Consumption (1.0 gpf/3.8 Lpf)  $\square$  Model 186 Water Saver (1.5 gpf/5.7 Lpf)

#### Specifications

Quiet, Exposed, Diaphragm Type, Chrome Plated Urinal Flushometer with the following features:

#### Flushometer

- PERMEX™ Synthetic Rubber Diaphragm with Dual Filtered Fixed Bypass
- ADA Compliant Metal Oscillating Non-Hold-Open Handle with Triple Seal Handle Packing
- ¾" I.P.S. Screwdriver Bak-Chek™ Angle Stop
- Free Spinning Vandal Resistant Stop Cap
- · Adjustable Tailpiece
- High Back Pressure Vacuum Breaker Flush Connection with One-piece Bottom Hex Coupling Nut
- Spud Coupling and Flange for 3/4" Top Spud
- Sweat Solder Adapter with Cover Tube and Cast Wall Flange with Set Screw
- High Copper, Low Zinc Brass Castings for Dezincification Resistance
- Non-Hold-Open Handle, Fixed Metering Bypass and No External Volume Adjustment to Ensure Water Conservation
- Flush Accuracy Controlled by CID™ Technology
- Diaphragm, Handle Packing, Stop Seat and Vacuum Breaker molded from PERMEX™ Rubber Compound for Chloramine Resistance

## Optima SMOOTH™ Unit

- ADA Compliant Optima® SMOOTH™ Hardwired Infrared Sensor for automatic "Hands-free" operation
- Sensor with Automatic Range Adjustment
- Chrome Plated Metal Sensor Housing
- Mechanical Manual Override Flush Handle
- "User in View" Flashing LED
- 25 to 80 psi Operating Range

Valve Body, Cover, Tailpiece and Control Stop shall be in conformance with ASTM Alloy Classification for Semi-Red Brass. Valve shall be in compliance to the applicable sections of ASSE 1037.


### Accessories

See Accessories Section and Royal® Optima® SMOOTH™ Flushometer Accessories Section of the Sloan catalog for details on these and other Royal® Optima® Flushometer Accessories.

### Fixtures

Consult Sloan for Sloan brand matching fixture options.



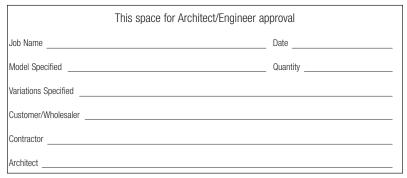



# ADA Compliant

## Automatic

Royal® Optima® SMOOTH™ equipped Flushometers provide the ultimate in sanitary protection and automatic operation. The Flushometer operates by means of a hardwired infrared sensor. Once the user enters the sensor's effective range and then steps away, the SMOOTH™ Unit initiates the flushing cycle to flush the fixture. State-of-the-art Technology enables activation of a manual override without "double flushing" occurring as the user departs (locks out sensor for approximately 10 seconds).

### Hygienic

The Royal® Optima® SMOOTH™ Flushometer is the next advancement in hygiene. It uses sensor technology to transform manual installations into electronic, hands-free operation. User makes no physical contact with the Flushometer surface except to initiate the Override Handle when required. Helps control the spread of infectious diseases.

# ▶ Economical

Automatic operation provides water usage savings over other flushing devices. Reduces maintenance and operation costs. Installation does not require turning off water to the valve.

## Warranty

3 year (limited)

# Description

Exposed, Battery Powered, Sensor Activated, Royal® Optima® SMOOTH™ Flushometer for ¾" top spud urinals.

## ➤ Flush Cycle

☐ Model 186-1.0 Low Consumption (1.0 gpf/3.8 Lpf) ☐ Model 186 Water Saver (1.5 gpf/5.7 Lpf)

#### OPERATION

 A continuous, invisible light beam is emitted from the SMOOTH<sup>TM</sup> unit's Infrared Sensor.







# **ELECTRICAL SPECIFICATIONS**

- Control Circuit
  6 VDC Input
- ► OPTIMA™ Sensor Type
  Active Infrared with Automatic
  Adjustment
- ► OPTIMA™ Sensor Range Normal Range: 26" - 32" (660 mm-813 mm) Reduced Range: 20" - 26" (508 mm-660 mm)
- Operating Pressure 25-80 psi (172-552 kPa)
- Indicator Lights
  User in View/Low Battery
- 2. When the user enters the sensor's effective range, the Red LED light in the sensor window flashes for eight seconds. After eight seconds of sensing the user, the light will stop flashing and the unit waits for the user to step away before initiating a flush cycle.
- When the user steps away, the unit initiates a flush cycle. The unit then automatically resets and is ready for the next user.



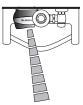

#### DIMENSIONS

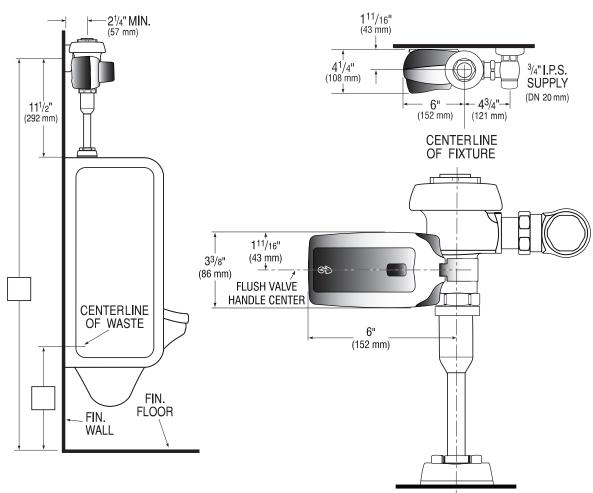

**SLOAN VALVE COMPANY • 10500 SEYMOUR AVENUE • FRANKLIN PARK, IL 60131**